

This document defines the contents of the passive PoE injector user manual. All the logo files can be found in the zip archive that contains this document file.

### User manual contents:

#### PASSIVE PoE INJECTOR - USER MANUAL

Code	Description
4690004000	A KIT PoE PASSIF

### WARNING / SAFETY PRECAUTIONS !

Ensure the right voltage and right polarities before connecting your end device

#### Connection :

Connect the RJ45 M (male) to one of the two EPV/ASV Ethernet RJ45

Connect the red and black cable to the EPV/ASV 12Vdc or 24Vdc power source

Connect the RJ45 F (female) to the end device through an Ethernet cable.

#### Pin Assignment:

	RJ45F		RJ45M	
PoE	1	← orange/white	→ 1	EPV/ASV Ethernet
	2	← orange	→ 2	
	3	← green/white	→ 3	
	6	← green	→ 6	
	4+5	← red	→ 1	EPV/ASV 12Vdc or 24Vdc
	7+8	← black	→ 2	



Power supplies

Aa	Creation		14/04/14	TG	
Issue	Modification	OM nb	Date	By	Checked



11,rue J.E.Dupuy BP66  
F-69543 CHAMPAGNE  
TEL : (33) 4 78 66 63 60  
FAX : (33) 4 78 47 54 33

## PASSIVE PoE INJECTOR USER MANUAL CONTENTS

This document is our property.  
Reproduction or transmission without  
authorization is prohibited.

**NOT140005Aa**

1

1